

פרטים

שם	מכבש מוסכים חשמלי / ידני
מספר פריט	272
יצרן	
דגם	
זמין מ	מיידי
מצב המכונה	במצב חדש
מיקום	מושב גנות

תיאור

מכבש מוסכים כושר לחיצה עד 60 טון
חדש,שנה אחריות
מיפתח מקסימלי -1040 מ"מ
מיפתח מינימלי -268 מ"מ

עלויות

עמלת מכירה	15%
מע"מ	המחיר אינו כולל מע"מ
תנאי משלוח	העמסה בשער המפעל ע"י הקונה
עלות פירוק והעמסה	ש"ח
עלות משלוח	
תנאי תשלום	תשלום מלא לפני האיסוף

פרטים טכניים

מידות	מ"מ 1085 x 1850 x 700
משקל	ק"ג

פרטים ליצירת קשר

שם	גונן שרוני
טלפון	
פקס	

נייד

0526697736

דוא"ל

pombit.com@gmail.com


גלריה





Operating Instructions

1. Fill adequate hydraulic oil in to the pump station's oil tank to the level of gauge. Do NOT operate the oil pump with no oil, a low oil or in reverse rotation.
2. Be careful to connect the delivery port of pump station with the cylinder's inlet and outlet as marked in the direction containers with the operation's instruction.
3. DO NOT operate the compressor when the worktable latch is normally locked in the worktable beam.
4. When working load reaches to 5/6 of oil compressor's rated load, the distance between supporting points on the worktable panel must be 0.5 times greater than the worktable beam's width across transverse direction and 0.7 times is greater than the worktable beam's width in longitudinal direction.
5. The compressor's rated pressure must be 20% of the rated load before delivery. The user is allowed to gradually reduce the pressure to its original compressor's rated pressure for long time.
6. Please refer to the Operator's Manual for details.

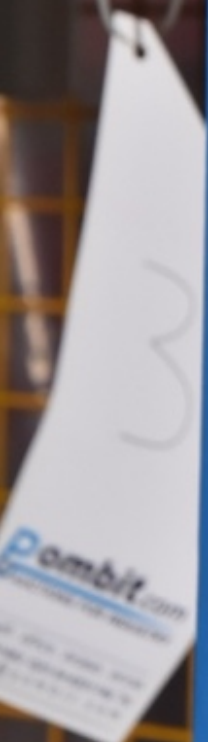

Control panel with the following components:

- POWER LAMP: A green indicator light with a label below it.
- START: A green push-button with a label below it.
- EMERGENCY STOP: A red mushroom-shaped stop button with a key inserted, labeled 'EMERGENCY STOP'.
- STOP: A red push-button with a label below it.
- Keyhole: A circular keyhole located to the right of the START button.

